

TYPE A

TYPE B

Either TYPE A or B disconnecter is used in an AVR. However, the wiring order is the same if you have to use your own disconnecter and rewire it, as shown in the right picture, blue wires locate on the right while white or yellow wires on the left. Our AVR has TYPE B disconnecter.

